



CAUTION: Always wear proper eye protection.



INSTALLATION INSTRUCTIONS

31503 Cooler with Bracket Mount Kit

Kit includes:




Cooler

Bracket

(2) 6mm Bolts (use on metal insert holes, see Fig. A)

(2) 1/4" x 1 1/4" Hex Head Screws (see Fig. B)

IMPORTANT: A 10 mm socket wrench with extension is necessary for proper installation of bracket using metal bolts. See figure A. While a 3/8" socket wrench with extension is necessary when installing 1/4" screws. See figure B. Installation of bracket does NOT require removal of ASM-SAM from body of car.

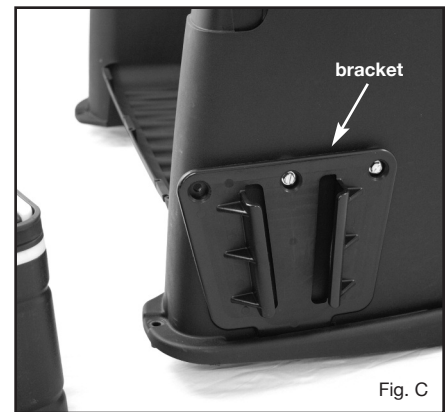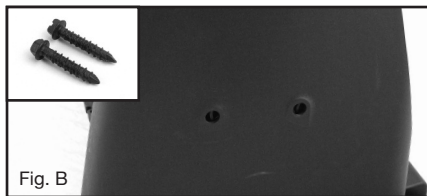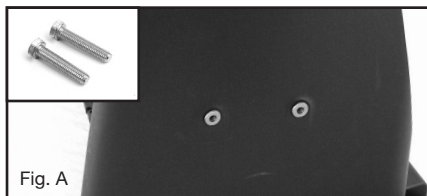

STEP 1:

Locate holes on either side of ASM-SAM (Seat Back Mount/Sweater Basket Mount) to decide which placement fits best and will not interfere with the removal of the cooler. See figure C.

STEP 2:

Install bracket with the two 6mm bolts or 1/4" x 1 1/4" screws provided. See figure C.

Note: If your holes have metal inserts use the (2) 6mm bolts provided. However, if holes have no metal inserts, then use the (2) 1/4" x 1 1/4" hex head screws provided.

STEP 3:

Slide cooler onto bracket and check placement. Push downward for proper seating. Open cooler top and make certain cooler clears objects on either side of the unit. See figure D.

Holds approximately 6 cans with ice.

